

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Identity Motors USA.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Identity Motors USA.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, DC area) or write to: NHTSA, U.S. Department of Transportation, Washington, DC 20590. You can also obtain other information about motor vehicle safety from the Hotline.



IDENTITY 1000xs

Owner's Manual



Have a problem? - Need parts? - Please call (602) 643-5897
Email: staff@identitymotors.com

Table of Contents

Caution.....	1
Specification.....	1
Interior Controls.....	2
Engine.....	2
Shifting Pattern.....	2
Description.....	3
General Safety Precautions.....	4
Warranty Information.....	4
Engine Break In.....	4
Before Driving.....	5
Starting, Riding and Stopping.....	5
Using Reverse.....	5
General Maintenance.....	6
Maintenance Table.....	7
Warranty.....	8-10

Warranty valid only when purchased from an authorized Identity Motors USA dealer!

This vehicle is sold as is except for a 2 year or 24,000 mile warranty (whichever comes first) on the engine and transmission. Identity Motors USA products are sold as is without warranty, except for a 90 day replacement parts only warranty against manufacture defects. The warranty does not cover labor, misuse, abuse or damage in shipping. Assembly, labor, disassembly and reassembly are not the responsibility of Identity Motors USA; also there are **NO refunds or exchanges**. Within 90 days of purchase, Identity Motors USA will replace any part that is a manufacture defect at no charge plus a **\$20.00** shipping and handling fee after the consumer sends back the defective warranted part to Identity Motors USA. When warranty is confirmed, Identity Motors USA will ship all parts via FEDEX ground only. For replacement parts, please call Identity Motors USA at 602-643-5897 or email staff@identitymotors.com. After 90 days from the date of purchase, replacement parts may be purchased from Identity Motors USA plus a **\$20.00** shipping and handling fee. Registration must be completed and sent in within seven (7) days of purchase with a copy of your receipt to validate the warranty. **NO refunds or exchanges**.

NOTE: If there is any shipping damage to your unit, you must report this to the truck line company immediately and then call Identity Motors USA to file a claim.

NOTE: Absolutely no warranty for consumable and normal wear items such as spark plugs, oil filters, fuel system cleaning, engine tune-up, belt or chain adjustments (including replacement), lubrication, light bulbs, clutches, lubricants, air filters, hoses, brake shoes, tires/tubes, plastic, battery, fuses, cosmetic problems or problems occurring due to lack of proper assembly or maintenance, or consumer abuse. Any and all modifications to the vehicle will void the manufactures warranty. Defective parts are subject to be recalled by IDENTITY MOTORS USA.

Disclaimer:

Identity Motors USA disclaims the warranty of merchantability and fitness for any particular use. This disclaimer shall be effective as to all claims of any kind made by or through any wholesaler, retailer, consumer or any other persons or entity. Some states do not permit this disclaimer of implied warranties. Hence, this disclaimer may not apply to you.

Limitation of Remedies:

Consumer's remedy is limited to replacement parts only and in no event shall exceed the purchase price. **Absolutely no returns or exchanges**. Incidental, consequential and/or indirect damages are expressly disclaimed. **NO** person or entity is authorized to alter, amend or increase this limited warranty.

Warranty Validation:

Please fill in and cut out the included form and mail it to:
Identity Motors USA, P.O. Box 25052, Phoenix, AZ 85002

IDENTITY MOTORS USA

LIMITED WARRANTY

FEDERAL EMISSION CONTROL SYSTEMS WARRANTY

IDENTITY MOTORS USA ("IDENTITY") warrants each new motorcycle that includes as standard equipment a headlight, taillight and stoplight:

(a) is designed, built and equipped so as to conform at the time of initial retail purchase with all applicable regulations of the United States Environmental Protection Agency ("US EPA"); and:

(b) is free from defects in material and workmanship which would cause such motorcycle to fail to conform with applicable regulations of the US EPA, for a period of five (5) years and, depending on engine displacement: 170-269cc: 18,000km (11,187 miles) This warranty time and mileage period shall begin on the date the motorcycle is delivered to the initial retail purchaser, or on the date the motorcycle is first placed in service as a demonstrator, rental, lease, or company motorcycle prior to retail sale.

1). **COVERAGE.** Warranty defects shall be remedied during customary business hours at any authorized IDENTITY motorcycle dealer located within the United States in compliance with the Clean Air Act and applicable regulations of the US EPA. Any part or parts replaced under this warranty shall become the property of IDENTITY MOTORS.

2). **OWNERS OBLIGATIONS.** The following obligations must be fulfilled by the owner to maintain the validity of the IDENTITY MOTORS USA Emission Control Systems Warranty:

(a) Owner must deliver the motorcycle to an authorized IDENTITY motorcycle dealer or equally qualified service facility for inspection, maintenance services and adjustments according to the Periodic Maintenance chart provided as part of or supplement to the owners guide. Optionally, the Owner may perform this maintenance only

if it is within the scope of the Owner's technical and practical ability, keeping in mind some maintenance operations may require special tools or technical expertise beyond the scope of the average Owner. In any event, the inspection, maintenance and adjustments are to be performed at the owner's expense.

(b) Owner must present a copy of the proof of initial retail purchase date, issued at the time of purchase to an authorized IDENTITY motorcycle dealer at the time warranty repairs are performed on the motorcycle. You may also be required to show that you have performed the required maintenance which is related to the alleged defect, so you should have detailed receipts indicating that the required periodic maintenance has been performed in accordance with the Periodic Maintenance chart in your owner's guide.

3). **LIMITATIONS.**

This Emission Control Systems Warranty shall not cover any of the following:

(a) Repair or replacement required as a result of (i) accident, (ii) misuse or neglect, (iii) lack of reasonable and proper maintenance, (iv) repairs improperly performed or replacements improperly installed, (v) use of replacement parts or accessories not conforming to IDENTITY specifications which adversely affect performance and/or durability, (vi) alterations or modifications not recommended or approved in writing by IDENTITY MOTORS USA, and/or (vii) use in competitive racing or related events.

(b) Replacement of parts and other services and adjustments required for routine maintenance.

(c) Any motorcycle on which odometer mileage has been changed so that the actual mileage cannot be determined.



4). **LIMITED LIABILITY.**

(a) The liability of IDENTITY MOTORS USA under this Emission Control Systems Warranty is limited solely to the remedying of defects in materials or workmanship by any authorized IDENTITY motorcycle dealer at its place of business during customary business hours. Please refer to IDENTITY website: www.identitymotors.com.

This warranty does not cover inconvenience or loss of use of the motorcycle, or transportation of the motorcycle to or from the IDENTITY Dealer. IDENTITY MOTORS USA SHALL NOT BE LIABLE FOR ANY OTHER EXPENSE, LOSS OR DAMAGE, WHETHER DIRECT, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY ARISING IN CONNECTION WITH THE SALE OR USE OF OR INABILITY TO USE THE IDENTITY MOTORCYCLE FOR ANY PURPOSE.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

IDENTITY MOTORS USA LIMITED WARRANTY NOISE CONTROL SYSTEM WARRANTY The following warranty applies to the noise control system and is in addition to the Vehicle Warranty and the Federal Emissions Control System Warranty. IDENTITY MOTORS USA warrants to the first, and each subsequent Owner, that this vehicle is designed and built so as to conform at the time of manufacture and sale with applicable Noise regulations of the US EPA (as tested under F-76 Drive-By FTP), and that it is free from defects in materials and workmanship which could cause this vehicle not to meet US EPA standards within one (1) year or 6,000 kilometers (3,730 miles), whichever occurs first. The warranty period shall begin on the date the motorcycle is delivered to the first retail purchaser or, if the motorcycle is placed in service as a demonstrator or company vehicle prior to sale at retail, on the date it is first placed in service.

THE FOLLOWING ITEMS ARE NOT COVERED BY THE NOISE CONTROL WARRANTY

1. Failures which arise as a result of misuse, alterations, or accident.
2. Replacing, removing or modifying any portion of the Noise Control System (consisting of the complete exhaust and intake system, including air filter assembly) with parts not certified to be Noise-Legal for street use.
3. Loss of time, inconvenience, loss of motorcycle use or other consequential damage or loss.
4. Any motorcycle on which the odometer mileage has been changed so that the actual mileage cannot be determined.






1. Accelerator Pedal
2. Clutch Pedal
3. Brake Pedal
4. Horn Buttons
5. Turn Signal Switch
6. Vent
7. Choke
8. Steering Wheel
9. Instrument Cluster
10. Center Console
11. Mirror
12. Door Handle
13. Window Crank
14. Gear Shifter
15. Seat

Headlight Switch

Windshield Wiper Switch

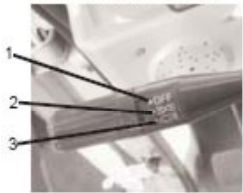

1. All Lights OFF
2. Headlights ON
3. Parking Light ON
4. Off
5. Low Speed
6. High Speed

ENGINE



1. Battery
2. Engine
3. Carburetor
4. Ignition Coil
5. Starter
6. CDI Box
7. Air Filter
8. Seat Locks
9. Gear Shift

SHIFTING PATTERN



SHIFT INDICATOR



You can shift from neutral to 1 to 2 to 3 to 4 to 5 and neutral, or down shift.
2

Periodic Service/ Lubrication	Every Ride	Every 500 Miles	Every 1000 Miles	Every 2500 Miles	Every 5000 Miles
Fuel Filter		I & C		I & R	
Fuel System				I	I
Fuel Lines		I			
Air Cleaner	I	I & C		I & C	
Intake		I		I	
Spark Plug		I	I & C		I & R
Valve Clearance		I	I	I	I
Engine Oil	✓	R		R	
Oil Filter		I	I & C		I & R
Throttle Pedal	I				
Idle Speed			I		
Carburetor		I		I & C	
Radiator	✓			I & C	
Radiator Hoses and Connections	I	I		I & C	
Coolant	✓		R		
Steering	I		I & L		
Axles					I
Brake Pedal	I				
Brake Lines	I	I			
Brake Fluid	✓			I & C	
Brake Master Cylinder		I			
Tires	I				
Wheels	I				
Lug Nuts	I				
Nuts, Bolts, Fasteners	I				
Seat Belt	I				

I-inspect = cleaning, adjustment or replace (if necessary)
 C-cleaning
 L-lubrication
 R-replace
 check fluid levels

GENERAL SAFETY PRECAUTIONS

- Please read this manual and all safety labels carefully, and follow correct operating procedures.
- Never operate your vehicle under influence of alcohol or drugs.
- Follow inspection and maintenance procedures and schedules described in this manual.
- Do not turn at excessive speeds.
- Maintain proper tire pressure: front 32 psi and rear 32 psi.
- Fuel is highly flammable. Keep it away from ignition sources or fire, especially when refueling, and always make sure engine is cool and not running when refueling.
- Engine and muffler get hot while in use, do not touch.
- Keep all body parts and clothing away from moving objects

THIS WARRANTY DOES NOT COVER

1. Normal wear and deterioration.
2. Normal maintenance
3. Repair caused by negligence, misuse, accidents, unsuitable attachments, over loading, or straining, poor maintenance or repair, or abuse.
4. Shipping Damage

THIS WARRANTY IS INVALID IF

1. The vehicle is not operated and maintained as recommended in the owner's manual.
2. Gears broken caused by improper gear shifting.
3. The owner does not perform his/her owner's obligations. Original purchaser only.

ENGINE BREAK-IN

- This is the most important time for the engine and the life of your vehicle, because your engine is brand new you should not drive at a hi speed for a prolonged period of time, vary your speed. Do not operate at a continuous speed. Never operate this vehicle above 45 mph.

Disobeying the warnings and advice in this manual can result in serious injury or death..



Before Driving

- Check all nuts and bolts for tightness
- Check the oil
- Check the antifreeze level in the radiator
- Check the brakes and throttle to be sure they work properly
- Check the tires and tire pressure

Starting, Riding and Stopping

- Practice in an empty area away from people and vehicles.
- Always remember to obey your local and state laws and regulations.
- Be sure your vehicle has fuel and oil.
- Be sure the vehicle is in neutral (turn the key back 1 click and use the shifter until the shift indication reads 0).
- Apply the brake and the clutch.
- Pull out to turn the choke on.



- Turn the engine on by turning the key completely.
 - After engine warms up, push the choke 1/4 in then 1/2 in and in 1 minute completely off.
 - If the engine is warm it should start without choking.
 - For a cold engine, let the engine idle for 1-3 minutes before driving, and then begin to push the choke in to turn it off.
 - Never exceed 4 seconds when turning the key to start the vehicle.
 - Release the key immediately after the engine starts.
 - Do not apply the key while the engine is running, it can cause damage to the starter.
 - To shift into first gear be sure your brake and clutch are applied and pull back on
- The gear shifter and release when you feel the transmission engage and when the shift indicator reads 1.
- Release the brake. Apply the throttle gradually as you release the clutch slowly (allow a lot of slip when starting out) until the clutch engages.
 - To shift into 2nd gear release the throttle and push in the clutch at the same time then shift into 2nd gear by pulling back on the gear shifter and releasing when you feel the transmission engage and when the shift indicator reads 2. After you shift, gradually apply the throttle and slowly release the clutch.
 - Use this sequence when shifting up to any gear.
 - To down shift from 5th to 4th and so on, release the throttle and gradually apply your brake to slow down, then apply the clutch and push forward on the gear shifter and release when you feel the transmission engage and when the shift indicator reads 4.
 - Use this sequence when down shifting from any gear.
 - When coming to a stop decrease your speed by releasing the throttle and applying the brakes and the clutch.

Using Reverse

- Shift the transmission into 1st gear, apply the brake and the clutch and push the shifter all the way to the right until you feel the transmission engage, then slowly push the throttle and release the clutch to move backwards. After backing up, apply the brake and clutch to stop. When at a complete stop, pull the shifter to the left until the shift indicator reads 1 for first gear. Release the brake and apply the throttle gradually as you release the clutch slowly until the clutch engages and you start moving forward.

Have a problem? - Need parts? - Please call (602) 643-5897
Email: staff@identitymotors.com



Mail to:

Identity Motors USA
P.O. Box 25052
Phoenix, AZ 85002

Warranty Validation Sheet

Name _____

Address _____

City _____ State _____ Zip _____

Dealer Name _____ Model # _____ Date of Purchase _____

Address _____

City _____ State _____ Zip _____